


UNITS 5 & 5A NORTHEM TRADING ESTATE
NORTHEM ROAD
ERITH
KENT DA8 3PP

TELEPHONE 01322 350 351
FAX 01322 350 354
email contactus@davidfitchservices.com
web site www.davidfitchservices.com

JTS RADIO MICROPHONES SET UP

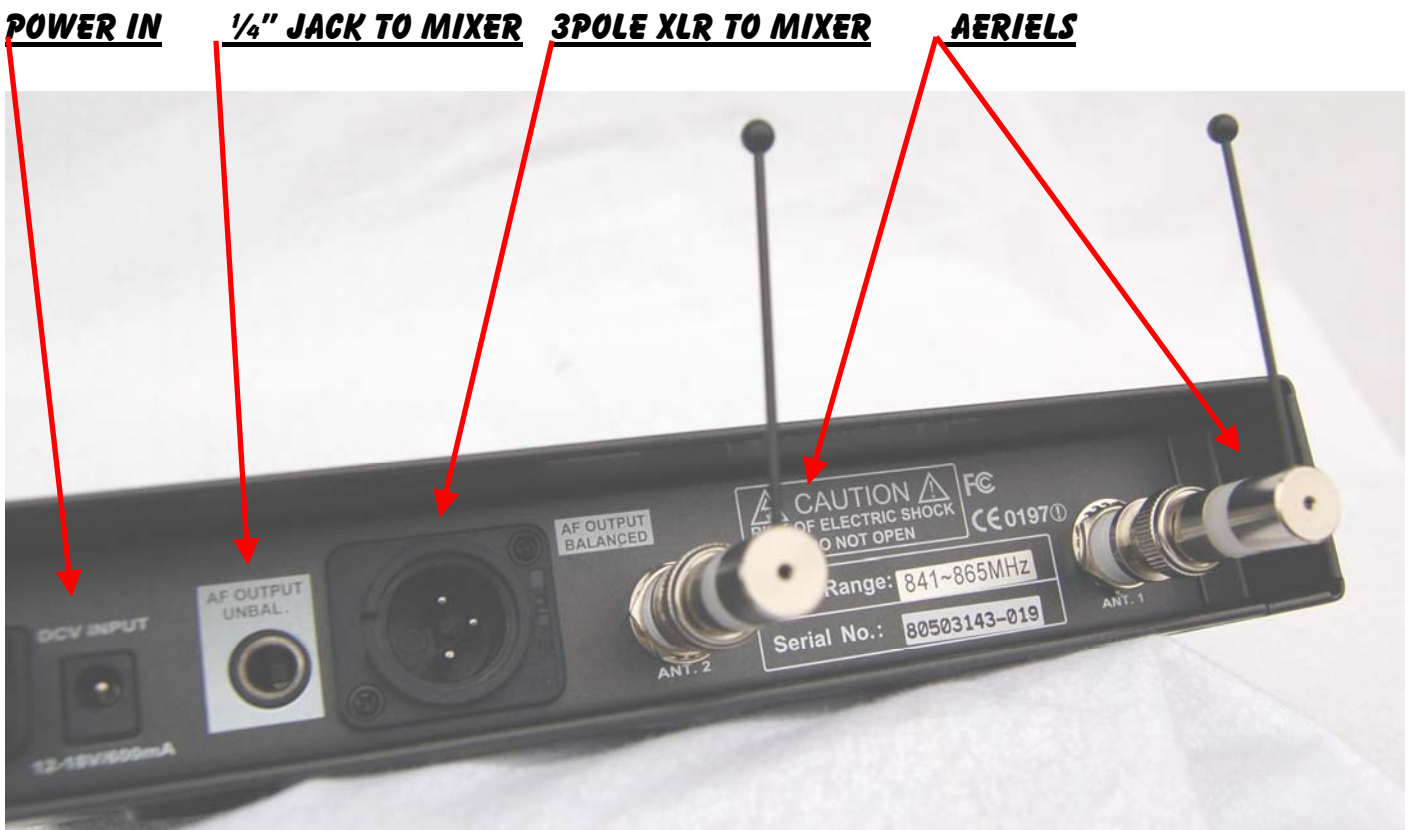

PTO

BELT PACK SET UP

MICROPHONE SOCKET **ON/OFF SWITCH** **AERIEL**



MICROPHONE BUTTON TO CENTRE




UP DOWN

DISPLAY

BATTERY CONDITION

SET

OPENING THE CASE

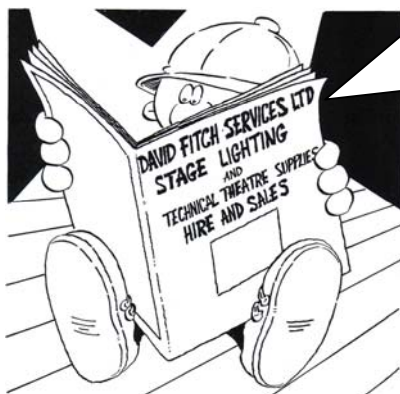

IT SAYS HERE.....
"DEPRESS **BOTH** SIDE CLIPS
TO MOVE THE CASE, UP FOR
BATTERIES DOWN FOR
FREQUENCIES"

BELT CLIP



ENSURE THE BATTERIES ARE
INSERTED CORRECTLY. (2 NO AA)

FIT THE AERIELS TO THE RECIEVER.TAKE THE SIGNAL FROM THE RADIO MIC RECIEVER FROM EITHER THE 3 POLE XLR SOCKET (BEST) OR THE 1/4" JACK SOCKET TO YOUR MIXER. MAKE SURE ALL OF THE CONNECTIONS ARE TIGHT AND THEY ARE THE RIGHT WAY ROUND, THEY SHOULD ONLY FIT ONE WAY BUT WE HAVE SEEN PEOPLE FORCE THEM AND DAMAGE THE KIT! AS MY DAD USED TO SAY "DON'T WRANGE!" IF YOU HAVE ONE OF OUR FOUR WAY KITS, ALL YOU NEED IS POWER AND THE 3 POLE XLR CABLES ARE ALREADY CONNECTED IN THE CASE, SIMPLE!

CHANGING FREQUENCY

OPEN THE BELT PACK CASE BY DEPRESSING BOTH SIDE CLIPS. SWITCH ON. PRESS ALL 3 BUTTONS, UP OR DOWN AND SET AND THIS WILL THEN SHOW FREQUE IN THE DISPLAY. RELEASE ALL 3 BUTTONS. USE THE UP OR DOWN BUTTONS TO GO TO THE DESIRED FREQUENCY. PRESS SET AND THIS WILL BE LOCKED. DO THE SAME TO THE RECIEVER SO THAT THE FREQUENCIES LINE UP. THE DISPLAY ON THE RECIEVER WILL SHOW THE STRENGTH OF SIGNAL, BATTERY CONDITION AND FREQUENCY. IF YOU HAVE THE HAND HELD VERSION, SLIDE THE BOTTOM COLOURED COVER OFF AND FOLLOW THE ABOVE SETTING PROCEDURE.

ON THE RECIEVER, SET THE LEVEL TO MID, ON THE MIXER SET THE MASTERS TO NEARLY THE TOP TO SAY -10DB AND THE CHANNEL FADER TO 0 ON THE DB SCALE (ABOUT 90% UP). THIS ALLOWS A LITTLE MORE VOLUME WHEN YOU HAVE THE AUDIENCE IN. USE THE GAIN POT AT THE TOP OF THE CHANNEL TO BRING THE MIC UP TO THE REQUIRED LEVEL, I.E. BEFORE IT FEEDS BACK. ADJUST THE BASS, MIDDLE AND TREBLE POTS TO GIVE A NICE SOUND, YOU MAY HAVE TO "TWEAK" THE SETTINGS IN REHEARSAL. IF YOU HAVE SPEAKON CONNECTORS (BLUE) ON THE SPEAKERS, DON'T FORGET THE 1/4 TURN TO LOCK THEM, WITHOUT NOTHING HAPPENS! TO UNDO PULL BACK THE METAL CLIP AND TURN TO THE LEFT..... THE PLUG, NOT YOU!

IF YOU NEED FURTHER ASSISTANCE PLEASE CALL 01322 350 351 OR 078 60 233 771